

EDQD - Bayreuth

Airport details

State	Bavaria
Country	Germany
Region	ED
Elevation	1601ft (488m)
Timezone	GMT +1
Coordinates	49.98443, 11.63857
Type	land
ICAO code	EDQD
IATA code	BYU
FAA code	n/a

Runway info

Runway 06 / 24	
length	1092m (3583ft)
bearing	69° / 249°
width	30m (98ft)
surface	asphalt
displacement threshold	0m (0ft) / 60m (197ft)
blast zone	108m (354ft) / 0m (0ft)
Runway 05R / 23L	
length	1082m (3550ft)
bearing	69° / 249°
width	28m (92ft)
surface	grass
Runway 05C / 23C	
length	868m (2848ft)
bearing	69° / 249°
width	28m (92ft)
surface	grass
Runway 05L / 23R	
length	799m (2621ft)
bearing	69° / 249°
width	28m (92ft)
surface	grass

Communication

Bayreuth Bayreuth Info	127.525
Bayreuth Bayreuth Info	127.525
Bayreuth Bayreuth Info	127.525
Bayreuth Bayreuth Info	127.525

Nearby beacons

code	identifier	dist	bearing	frequency
BAY	BAYREUTH VOR	0	290.9°	110.60
GRW	GRAFENWOHR NDB	20.9	133.7°	405
GRF	GRAFENWOHR TACAN	21	134.3°	111.80
ERL	ERLANGEN VOR/DME	27.3	235.9°	114.90
OKG	CHEB VOR/DME	29.9	83.9°	115.70
RTB	ROETHENBACH NDB	33.6	217.5°	415
NGD	DME	36.2	229.1°	113.10
NUB	NUERNBERG VOR/DME	37.2	231.4°	115.75
HFX	HOHENFELS NDB	46.8	163.9°	286
ERF	ERFURT VOR/DME	60	337.4°	113.85
EFD	DME	65.3	325.7°	112.05
RDG	RODING VOR/DME	66.4	136.7°	114.70
AGD	DME	68.6	41.1°	115.30

Departure and arrival routes

Transition altitude 5000ft

SID end points

	distance	outbound direction
--	----------	--------------------

RW06

ABER3R	18.2	79°
PIVI2R	20.9	215°
ANEL3R	20.6	242°
LONL3R	16.8	282°

RW24

ABER2G	18.2	79°
PIVI1G	20.9	215°
ANEL2G	20.6	242°
LONL2G	16.8	282°

STAR starting points

	distance	inbound direction
--	----------	-------------------

ALL

ANEL5Z	20.6	62°
LONL5Z	16.8	102°

Holding patterns

STAR name	hold at	type	turn	heading*	altitude	leg	speed limit
ANEL5Z	VADKO	VHF	left	237 (57)°	> 5000ft	1.0min timed	170
KULO5Z	VADKO	VHF	left	237 (57)°	> 5000ft	1.0min timed	170
LONL5Z	VADKO	VHF	left	237 (57)°	> 5000ft	1.0min timed	170

*) magnetic outbound (inbound) holding course

Disclaimer

The information on this website is not for real aviation. Use this data with the X-Plane flight simulator only! Data taken with kind consent from X-Plane source code and data files. Content is subject to change without notice.

To be used with X-Plane simulation only