

EFHA - Halli / Kuorevesi - Halli

Airport details

State	Western Finland
Country	Finland
Region	EF
Elevation	479ft (146m)
Timezone	GMT +2
Coordinates	61.85639, 24.78917
Type	land
ICAO code	EFHA
IATA code	KEV
FAA code	n/a

Runway info

Runway 08 / 26	
length	2592m (8504ft)
bearing	88° / 268°
width	64m (210ft)
surface	asphalt
blast zone	253m (830ft) / 206m (676ft)

Communication

Halli Halli ATIS	135.500
Halli Halli ATIS	135.500
Halli Halli ATIS	135.500
Halli Halli ATIS	135.500
Halli Halli Tower	128.900
Halli Halli Tower	119.700
Halli Halli Tower	128.900
Halli Halli Tower	119.700
Halli Halli Tower	119.700
Halli Halli Tower	128.900
Halli Halli Tower	119.700
Halli Halli Tower	128.900
Halli Halli Radar	119.700
Halli Halli Radar	124.550
Halli Halli Radar	124.550
Halli Halli Radar	119.700
Halli Halli Radar	119.700
Halli Halli Radar	124.550
Halli Halli Radar	124.550
Halli Halli Radar	119.700

Approach frequencies

ILS-cat-I	26	109.9	18.00mi
3° GS	26	109.9	18.00mi

Nearby beacons

code	identifier	dist	bearing	frequency
HAL	HALLI VOR/DME	0.3	97.2°	115.20
LNE	LUONET (JYVASKYLA) VOR/DME	41.1	55.9°	112.30
ANT	DME	60.4	161.2°	113.70

Departure and arrival routes

Transition altitude 5000ft

STAR starting points **distance** **inbound direction**

RW08

ARBE1B	16.1	52°
ATSE1B	19.9	247°
ERTO1B	20.7	255°
USUP1B	15.9	317°

RW26

ARBE1A	16.1	52°
ATSE1A	19.9	247°
ERTO1A	20.7	255°
USUP1A	15.9	317°

Holding patterns

STAR name	hold at	type	turn	heading*	altitude	leg	speed limit
ARBE1A	MITKU	VHF	left	167 (347)°	> 2700ft	1.0min timed	230
ARBE1B	TIPUB	VHF	right	347 (167)°	> 2700ft	1.0min timed	230
ATSE1A	MITKU	VHF	left	167 (347)°	> 2700ft	1.0min timed	230
ATSE1B	TIPUB	VHF	right	347 (167)°	> 2700ft	1.0min timed	230
ERTO1A	MITKU	VHF	left	167 (347)°	> 2700ft	1.0min timed	230
ERTO1B	TIPUB	VHF	right	347 (167)°	> 2700ft	1.0min timed	230
USUP1A	MITKU	VHF	left	167 (347)°	> 2700ft	1.0min timed	230
USUP1B	TIPUB	VHF	right	347 (167)°	> 2700ft	1.0min timed	230

*) magnetic outbound (inbound) holding course

Disclaimer

The information on this website is not for real aviation. Use this data with the X-Plane flight simulator only! Data taken with kind consent from X-Plane source code and data files. Content is subject to change without notice.

To be used with X-Plane simulation only