

FQMA - Maputo - Maputo Intl

Airport details

State	Maputo (city)
Country	Mozambique
Region	FQ
Elevation	145ft (44m)
Timezone	GMT +2
Coordinates	-25.92602, 32.56372
Type	land
ICAO code	FQMA
IATA code	MPM
FAA code	n/a

Runway info

Runway 05 / 23	
length	3664m (12021ft)
bearing	31° / 211°
width	45m (148ft)
surface	asphalt
blast zone	12m (39ft) / 255m (837ft)
Runway 10 / 28	
length	1702m (5584ft)
bearing	87° / 267°
width	45m (146ft)
surface	asphalt

Communication

Maputo Intl Maputo GND	121.700
Maputo Intl Maputo GND	121.900
Maputo Intl Maputo GND	121.700
Maputo Intl Maputo GND	121.900
Maputo Intl Maputo GND	121.700
Maputo Intl Maputo GND	121.900
Maputo Intl Maputo GND	121.700
Maputo Intl Maputo GND	121.900
Maputo Intl Maputo TWR	118.100
Maputo Intl Maputo TWR	118.100
Maputo Intl Maputo TWR	118.100
Maputo Intl Maputo TWR	118.100
Maputo Intl Maputo APP	121.300
Maputo Intl Maputo APP	121.300
Maputo Intl Maputo APP	121.300
Maputo Intl Maputo APP	121.300

Approach frequencies

ILS-cat-II	23	110.3	18.00mi
3° GS	23	110.3	18.00mi

Nearby beacons

code	identifier	dist	bearing	frequency
VMA	MAPUTO VOR/DME	4	35.3°	112.70
VSK	SIKHUPHE VOR/DME	53.1	241.8°	117.10

Departure and arrival routes

Transition altitude 3000ft

SID end points

	distance	outbound direction
--	----------	--------------------

RW05

UVAP1A	86.3	35°
UVGN1B	85.9	54°
UVER1A	85.5	66°
UMTI1B	56.4	188°
TONK1C	27.4	247°
ORNA1C	32.2	271°
UVDS1B	85.3	350°

RW23

UVDS1A	85.9	8°
UVGN1A	86.3	35°
UVTO1A	85.5	66°
UMTI1A	56.4	188°
TONK1A	27.4	247°
ORNA1A	32.2	271°

STAR starting points

	distance	inbound direction
--	----------	-------------------

RW05

EPRE1A	56.4	8°
TONK1A	27.4	67°
ATUS1A	85.3	170°
EGPO1A	85.9	188°
AXIV1A	85.1	201°
ANTE1A	86.3	210°
IMTA1A	86.3	215°
APLA1A	85.9	234°
USUM1A	85.5	246°
NIKA1A	84.8	257°

RW23

EPRE1B	56.4	8°
TONK1B	27.4	67°
ORNA1B	32.2	91°

ATUS1B	85.3	170°
EGPO1B	85.9	188°
AXIV1B	85.1	201°
ANTE1B	86.3	210°
IMTA1B	86.3	215°
APLA1B	85.9	234°
USUM1B	85.5	246°
NIKA1B	84.8	257°

Disclaimer

The information on this website is not for real aviation. Use this data with the X-Plane flight simulator only! Data taken with kind consent from X-Plane source code and data files. Content is subject to change without notice.

To be used with X-Plane simulation only