

GMMZ - Ouarzazate

Airport details

State	Ouarzazate Province
Country	Morocco
Region	GM
Elevation	3782ft (1153m)
Timezone	GMT +0
Coordinates	30.93718, -6.90599
Type	land
ICAO code	GMMZ
IATA code	OZZ
FAA code	n/a

Runway info

Runway 12 / 30	
length	2988m (9803ft)
bearing	114° / 294°
width	40m (132ft)
surface	asphalt
blast zone	20m (66ft) / 20m (66ft)

Communication

OUARZAZATE TWR	118.100
OUARZAZATE TWR	118.100
OUARZAZATE TWR	118.100
OUARZAZATE TWR	118.100
OUARZAZATE TWR	119.300
OUARZAZATE TWR	119.300
OUARZAZATE TWR	119.300
OUARZAZATE TWR	119.300

Approach frequencies

ILS-cat-I	30	110.3	18.00mi
3° GS	30	110.3	18.00mi

Nearby beacons

code	identifier	dist	bearing	frequency
OZT	OUARZAZATE VOR/DME	0.1	27.5°	116.70
ORZ	OUARZAZATE NDB	1.3	112.7°	384

Departure and arrival routes

Transition altitude 10000ft

STAR starting points	distance	inbound direction
RW30		
LINV1A, LINV2A	24.8	77°
MAXO2A, MAXO1A, MAXO3A	25.0	120°
MOGV3A, MOGV2A, MOGV1A	25.2	165°
RATV2A, RATV1A	25.2	202°
TOGM1A, TOGM2A	25.2	212°
LARA2A, LARA1A	25.0	248°

Holding patterns

STAR name	hold at	type	turn	heading*	altitude	leg	speed limit
LARA1A	TIDMO	VHF	right	29 (209)°	9200ft - 14000ft	1.0min timed	210
LARA2A	TALOK	VHF	right	122 (302)°	8200ft - 14000ft	DME 5.0mi	210
LINV1A	TIDMO	VHF	right	29 (209)°	9200ft - 14000ft	1.0min timed	210
LINV2A	TALOK	VHF	right	122 (302)°	8200ft - 14000ft	DME 5.0mi	210
MAXO1A	TIDMO	VHF	right	29 (209)°	9200ft - 14000ft	1.0min timed	210
MAXO2A	TALOK	VHF	right	122 (302)°	8200ft - 14000ft	DME 5.0mi	210
MAXO3A	TALOK	VHF	right	122 (302)°	8200ft - 14000ft	DME 5.0mi	210
MOGV1A	TIDMO	VHF	right	29 (209)°	9200ft - 14000ft	1.0min timed	210
MOGV2A	TALOK	VHF	right	122 (302)°	8200ft - 14000ft	DME 5.0mi	210
MOGV3A	TALOK	VHF	right	122 (302)°	8200ft - 14000ft	DME 5.0mi	210
RATV1A	TIDMO	VHF	right	29 (209)°	9200ft - 14000ft	1.0min timed	210
RATV2A	TALOK	VHF	right	122 (302)°	8200ft - 14000ft	DME 5.0mi	210
TOGM1A	TIDMO	VHF	right	29 (209)°	9200ft - 14000ft	1.0min timed	210
TOGM2A	TALOK	VHF	right	122 (302)°	8200ft - 14000ft	DME 5.0mi	210

*) magnetic outbound (inbound) holding course

Disclaimer

The information on this website is not for real aviation. Use this data with the X-Plane flight simulator only! Data taken with kind consent from X-Plane source code and data files. Content is subject to change without notice.

To be used with X-Plane simulation only