

KBKV - Brooksville - Brooksville-tampa Bay Rgnl

Airport details

State	Florida
Country	United States of America
Region	K7
Elevation	77ft (23m)
Timezone	GMT -5
Coordinates	28.47361, -82.45541
Type	land
ICAO code	KBKV
IATA code	n/a
FAA code	BKV

Runway info

Runway 9 / 27	
length	2130m (6988ft)
bearing	90° / 270°
width	46m (150ft)
surface	concrete
Runway 3 / 21	
length	1532m (5026ft)
bearing	29° / 209°
width	46m (150ft)
surface	concrete

Communication

Brooksville-Tampa Bay Rgnl ASOS	134.725
Brooksville-Tampa Bay Rgnl ASOS	134.725
Brooksville-Tampa Bay Rgnl ASOS	134.725
Brooksville-Tampa Bay Rgnl ASOS	134.725
Brooksville-Tampa Bay Rgnl CTAF/UNICOM	118.550
Brooksville-Tampa Bay Rgnl CTAF/UNICOM	118.550
Brooksville-Tampa Bay Rgnl CTAF/UNICOM	118.550
Brooksville-Tampa Bay Rgnl CTAF/UNICOM	118.550
Brooksville-Tampa Bay Rgnl TAMPA CLNC DEL	119.125
Brooksville-Tampa Bay Rgnl TAMPA CLNC DEL	119.125
Brooksville-Tampa Bay Rgnl TAMPA CLNC DEL	119.125

Brooksville-Tampa Bay Rgnl TAMPA CLNC DEL	119.125
Brooksville-Tampa Bay Rgnl TWR	118.550
Brooksville-Tampa Bay Rgnl GRND	121.400
Brooksville-Tampa Bay Rgnl TWR	118.550
Brooksville-Tampa Bay Rgnl GRND	121.400
Brooksville-Tampa Bay Rgnl TWR	118.550
Brooksville-Tampa Bay Rgnl GRND	121.400
Brooksville-Tampa Bay Rgnl TWR	118.550
Brooksville-Tampa Bay Rgnl GRND	121.400
Brooksville-Tampa Bay Rgnl TAMPA APP/DEP	119.900
Brooksville-Tampa Bay Rgnl TAMPA APP/DEP	119.900
Brooksville-Tampa Bay Rgnl TAMPA APP/DEP	119.900
Brooksville-Tampa Bay Rgnl TAMPA APP/DEP	119.900
Brooksville-Tampa Bay Rgnl TAMPA APP/DEP	119.900
Brooksville-Tampa Bay Rgnl TAMPA APP/DEP	119.900
Brooksville-Tampa Bay Rgnl TAMPA APP/DEP	119.900

Approach frequencies

ILS-cat-I	09	110.75	18.00mi
3° GS	09	110.75	18.00mi

Nearby beacons

code	identifier	dist	bearing	frequency
TP	COSME (TAMPA) NDB	23.6	190.1°	368
PI	CAPOK(ST PETERSBURG-CLEARWATER NDB	31.5	207.4°	360
PIE	SAINT PETERSBURG VORTAC	36	202°	116.40
MCF	MACDILL (TAMPA) TACAN	36.9	185.4°	111
LAL	LAKELAND VORTAC	37.4	137.8°	116
OCF	OCALA VORTAC	43.9	18°	113.70

Disclaimer

The information on this website is not for real aviation. Use this data with the X-Plane flight simulator only! Data taken with kind consent from X-Plane source code and data files. Content is subject to change without notice.

To be used with X-Plane simulation only