

KWVI - Watsonville - Watsonville Muni

Airport details

State	California
Country	United States of America
Region	K2
Elevation	163ft (50m)
Timezone	GMT -8
Coordinates	36.93572, -121.78964
Type	land
ICAO code	KWVI
IATA code	WVI
FAA code	WVI

Runway info

Runway 2 / 20	
length	1369m (4491ft)
bearing	38° / 218°
width	46m (151ft)
surface	asphalt
displacement threshold	0m (0ft) / 183m (600ft)
blast zone	12m (39ft) / 0m (0ft)
Runway 9 / 27	
length	1217m (3993ft)
bearing	98° / 278°
width	30m (98ft)
surface	asphalt
blast zone	2m (7ft) / 0m (0ft)

Communication

Watsonville Muni ASOS	132.275
Watsonville Muni ASOS	132.275
Watsonville Muni ASOS	132.275
Watsonville Muni ASOS	132.275
Watsonville Muni CTAF/UNICOM	122.800
Watsonville Muni CTAF/UNICOM	122.800
Watsonville Muni CTAF/UNICOM	122.800
Watsonville Muni CTAF/UNICOM	122.800
Watsonville Muni NORCAL APP/DEP	133.000
Watsonville Muni NORCAL APP/DEP	127.150
Watsonville Muni NORCAL APP/DEP	133.000
Watsonville Muni NORCAL APP/DEP	127.150
Watsonville Muni NORCAL APP/DEP	127.150
Watsonville Muni NORCAL APP/DEP	133.000

Watsonville Muni NORCAL APP/DEP 127.150

Watsonville Muni NORCAL APP/DEP 133.000

Approach frequencies

LOC 02 108.3 18.00mi

Nearby beacons

code	identifier	dist	bearing	frequency
SNS	SALINAS VORTAC	18.6	145.5°	117.30
MR	MUNSO (MONTEREY) NDB	20.2	205.3°	385
SJC	SAN JOSE VOR/DME	27.3	340.5°	114.10
UAD	CHUALAR (SALINAS) NDB	30.7	144.7°	263
NUQ	MOFFETT (MOUNTAIN VIEW) TACAN	32.4	331.6°	117.60
OSI	WOODSIDE VOR/DME	36.1	312.8°	113.90
LV	REIGA (LIVERMORE) NDB	45.7	7.9°	374
BSR	BIG SUR VORTAC	45.8	168.9°	114
SFO	SAN FRANCISCO VOR/DME	49.6	319.4°	115.80
OAK	OAKLAND VOR/DME	51.7	331.2°	116.80
MOD	MODESTO VOR/DME	57.4	50.2°	114.60
HGT	HUNTER LIGGETT NDB	65.3	148.3°	209
SAU	SAUSALITO VOR/DME	65.3	321.4°	116.20

Departure and arrival routes

Transition altitude 18000ft

Transition level 18000ft

SID end points	distance	outbound direction
RW02		
WVI4	18.6	146°
RW09		
GARLK1	37.1	140°
WVI4	18.6	146°
RW20		
GARLK1	37.1	140°
WVI4	18.6	146°

Disclaimer

The information on this website is not for real aviation. Use this data with the X-Plane flight simulator only! Data taken with kind consent from X-Plane source code and data files. Content is subject to change without notice.

To be used with X-Plane simulation only