

LELC - San Javier - Murcia San Javier

Airport details

State	Region of Murcia
Country	Spain
Region	LE
Elevation	27ft (8m)
Timezone	GMT +1
Coordinates	37.77646, -0.81411
Type	land
ICAO code	LELC
IATA code	MJV
FAA code	n/a

Runway info

Runway 05R / 23L	
length	2315m (7595ft)
bearing	52° / 232°
width	45m (148ft)
surface	asphalt
blast zone	196m (643ft) / 195m (640ft)
Runway 05L / 23R	
length	1581m (5187ft)
bearing	52° / 232°
width	46m (150ft)
surface	asphalt
blast zone	196m (643ft) / 226m (741ft)

Communication

Murcia San Javier SAN JAVIER GND	121.600
Murcia San Javier SAN JAVIER GND	121.600
Murcia San Javier SAN JAVIER GND	121.600
Murcia San Javier SAN JAVIER GND	121.600
Murcia San Javier SAN JAVIER TWR CIV	130.300
Murcia San Javier SAN JAVIER TWR CIV	130.300
Murcia San Javier SAN JAVIER TWR CIV	130.300
Murcia San Javier SAN JAVIER TWR CIV	130.300
Murcia San Javier SAN JAVIER APP	133.000
Murcia San Javier SAN JAVIER APP	133.000
Murcia San Javier SAN JAVIER APP	133.000

Approach frequencies

ILS-cat-I	05R	110.5	18.00mi
ILS-cat-I	23L	109.3	18.00mi
3° GS	23L	109.3	18.00mi
2.8° GS	05R	110.5	18.00mi

Nearby beacons

code	identifier	dist	bearing	frequency
VSJ	SAN JAVIER VORTAC	0.2	22.4°	113
MUR	MURCIA VOR/DME	14.6	274.7°	114.85
TRL	ALCANTARILLA (MURCIA) TACAN	22.3	292.6°	116.60
ALT	ALTET VOR/DME	31.7	26.3°	113.80
AI	ALICANTE NDB	32	16.5°	330
ATE	ALICANTE VOR/DME	32.4	24°	114.65

Departure and arrival routes

Transition altitude 6000ft

SID end points

	distance	outbound direction
RW05R		
ALT2E	31.7	26°
PALO1A	17.9	126°
RW23L		
PALO1B	17.9	126°
DIME2A	32.9	217°

STAR starting points

	distance	inbound direction
RW05R		
DINC2A	38.5	42°
PALO1C	17.9	306°
RW23L		
ALT3F	31.7	206°
PALO1D	17.9	306°

Holding patterns

STAR name	hold at	type	turn	heading*	altitude	leg	speed limit
ALT3F	DITRE	VHF	left	54 (234)°	> 4000ft	DME 5.0mi	ICAO rules
DINC2A	SANSI	VHF	right	216 (36)°	> 3500ft	DME 4.1mi	210
PALO1C	SANSI	VHF	right	216 (36)°	> 3500ft	DME 4.1mi	210
PALO1D	DITRE	VHF	left	54 (234)°	> 4000ft	DME 5.0mi	ICAO rules

*) magnetic outbound (inbound) holding course

Disclaimer

The information on this website is not for real aviation. Use this data with the X-Plane flight simulator only! Data taken with kind consent from X-Plane source code and data files. Content is subject to change without notice.

To be used with X-Plane simulation only