

# MRLB - Liberia - Daniel Oduber Quiros Intl

---

## Airport details

State	Guanacaste
Country	Costa Rica
Region	MR
Elevation	270ft (82m)
Timezone	GMT -6
Coordinates	10.59301, -85.54555
Type	land
ICAO code	MRLB
IATA code	LIR
FAA code	n/a

## Runway info

Runway 07 / 25	
length	2745m (9006ft)
bearing	70° / 250°
width	45m (148ft)
surface	asphalt
blast zone	10m (33ft) / 7m (23ft)

## Communication

Daniel Oduber Quiros Intl ATIS	127.775
Daniel Oduber Quiros Intl ATIS	127.775
Daniel Oduber Quiros Intl ATIS	127.775
Daniel Oduber Quiros Intl ATIS	127.775
Daniel Oduber Quiros Intl GND	121.700
Daniel Oduber Quiros Intl GND	121.700
Daniel Oduber Quiros Intl GND	121.700
Daniel Oduber Quiros Intl GND	121.700
Daniel Oduber Quiros Intl LIBERIA TWR	118.800
Daniel Oduber Quiros Intl LIBERIA TWR	118.800
Daniel Oduber Quiros Intl LIBERIA TWR	118.800
Daniel Oduber Quiros Intl LIBERIA TWR	118.800
Daniel Oduber Quiros Intl LIBERIA APP	119.800
Daniel Oduber Quiros Intl LIBERIA APP	119.800
Daniel Oduber Quiros Intl LIBERIA APP	119.800

Daniel Oduber Quiros Intl LIBERIA APP	119.800
Daniel Oduber Quiros Intl LIBERIA DEP	119.800
Daniel Oduber Quiros Intl LIBERIA DEP	119.800
Daniel Oduber Quiros Intl LIBERIA DEP	119.800
Daniel Oduber Quiros Intl LIBERIA DEP	119.800

## Approach frequencies

ILS-cat-I	07	111.3	18.00mi
3° GS	07	111.3	18.00mi

## Nearby beacons

code	identifier	dist	bearing	frequency
LIB	LIBERIA VOR/DME	0	325.3°	112.80

## Departure and arrival routes

Transition altitude	19000ft
Transition level	20000ft

SID end points		distance	outbound direction
RW07			
	CAPUL2	30.7	115°
RW25			
	GUARD2	30.7	115°

STAR starting points		distance	inbound direction
ALL			
	COTALN	39.9	158°
	COTALS, DANTA	25.0	295°

## Holding patterns

STAR name	hold at	type	turn	heading*	altitude	leg	speed limit
COTALN	COTAL	VHF	left	250 (70)°	3300ft - 60000ft	1.0min timed	ICAO rules
COTALS	COTAL	VHF	left	250 (70)°	3300ft - 60000ft	1.0min timed	ICAO rules

\*) magnetic outbound (inbound) holding course

# Disclaimer

The information on this website is not for real aviation. Use this data with the X-Plane flight simulator only! Data taken with kind consent from X-Plane source code and data files. Content is subject to change without notice.

## To be used with X-Plane simulation only