

RJFE - Goto - Fukue

Airport details

State	Nagasaki Prefecture
Country	Japan
Region	RJ
Elevation	271ft (83m)
Timezone	GMT +9
Coordinates	32.66639, 128.83278
Type	land
ICAO code	RJFE
IATA code	FUJ
FAA code	n/a

Runway info

Runway 03 / 21	
length	2003m (6572ft)
bearing	30° / 210°
width	45m (148ft)
surface	asphalt
blast zone	61m (200ft) / 61m (200ft)

Communication

Fukue Fukue Radio	118.350
Fukue Fukue Radio	118.350
Fukue Fukue Radio	118.350
Fukue Fukue Radio	118.350

Approach frequencies

LOC	21	110.1	18.00mi
LOC	03	109.7	18.00mi

Nearby beacons

code	identifier	dist	bearing	frequency
FUE	FUKUE VOR/DME	0.3	290.1°	115.80

Departure and arrival routes

Transition altitude	14000ft
Transition level	14000ft

SID end points		distance	outbound direction
RW03			
	IKE4	80.4	41°
	OLVIN1	60.5	41°
	AGRIT1	25.1	77°
	NAGAS4	56.8	77°
RW21			
	IKE4	80.4	41°
	OLVIN1	60.5	41°
	AGRIT1	25.1	77°
	NAGAS4	56.8	77°

Disclaimer

The information on this website is not for real aviation. Use this data with the X-Plane flight simulator only! Data taken with kind consent from X-Plane source code and data files. Content is subject to change without notice.

To be used with X-Plane simulation only