

RJNF - Fukui

Airport details

State	Fukui Prefecture
Country	Japan
Region	RJ
Elevation	19ft (6m)
Timezone	GMT +9
Coordinates	36.14211, 136.22357
Type	land
ICAO code	RJNF
IATA code	FKJ
FAA code	n/a

Runway info

Runway 18 / 36	
length	1322m (4337ft)
bearing	175° / 355°
width	30m (100ft)
surface	asphalt
displacement threshold	65m (213ft) / 65m (213ft)

Communication

Fukui FUKUI TWR	118.600
Fukui FUKUI TWR	118.600
Fukui FUKUI TWR	118.600
Fukui FUKUI TWR	118.600
Fukui KOMATSU APP	120.100
Fukui KOMATSU APP	120.100
Fukui KOMATSU APP	120.100
Fukui KOMATSU APP	120.100

Nearby beacons

code	identifier	dist	bearing	frequency
KMC	KOMATSU VORTAC	17.6	35.3°	112
GFT	GIFU TACAN	54.6	139.7°	109.40
TOE	TOYAMA VOR/DME	55.9	62.2°	110.85
KCC	NAGOYA VORTAC	62.5	141.7°	114.20

Departure and arrival routes

Transition altitude	14000ft
---------------------	---------

Transition level 14000ft

SID end points		distance	outbound direction
RW18	AWARA1	11.2	321°
	AWARA1	11.2	321°
RW36	AWARA1	11.2	321°
	AWARA1	11.2	321°

Disclaimer

The information on this website is not for real aviation. Use this data with the X-Plane flight simulator only! Data taken with kind consent from X-Plane source code and data files. Content is subject to change without notice.

To be used with X-Plane simulation only