

RJOA - Mihara - Hiroshima

Airport details

State	Hiroshima Prefecture
Country	Japan
Region	RJ
Elevation	1084ft (330m)
Timezone	GMT +9
Coordinates	34.43611, 132.91945
Type	land
ICAO code	RJOA
IATA code	Hlj
FAA code	n/a

Runway info

Runway 10 / 28	
length	2993m (9820ft)
bearing	90° / 270°
width	60m (197ft)
surface	asphalt
blast zone	60m (197ft) / 60m (197ft)

Communication

Hiroshima ATIS	127.250
Hiroshima ATIS	127.250
Hiroshima ATIS	127.250
Hiroshima ATIS	127.250
Hiroshima TWR	126.200
Hiroshima TWR	126.200
Hiroshima TWR	126.200
Hiroshima TWR	126.200
Hiroshima RADAR	125.150
Hiroshima RADAR	125.150
Hiroshima RADAR	119.900
Hiroshima APP	124.050
Hiroshima APP	119.900
Hiroshima APP	119.900
Hiroshima APP	124.050
Hiroshima RADAR	124.050
Hiroshima RADAR	119.900
Hiroshima RADAR	119.900
Hiroshima RADAR	124.050
Hiroshima RADAR	124.050
Hiroshima APP	124.050

Hiroshima APP	119.900
Hiroshima RADAR	125.150
Hiroshima RADAR	124.050
Hiroshima RADAR	125.150
Hiroshima RADAR	119.900
Hiroshima APP	124.050
Hiroshima APP	119.900
Hiroshima DEP	119.900
Hiroshima DEP	119.900
Hiroshima DEP	119.900
Hiroshima DEP	119.900

Approach frequencies

ILS-cat-III	10	108.7	18.00mi
3° GS	10	108.7	18.00mi

Nearby beacons

code	identifier	dist	bearing	frequency
HGE	HONGO (HIROSHIMA) VOR/DME	0.2	117.3°	117.90
NEU	IWAKUNI TACAN	37.3	247.6°	109.80
MYE	MATSUYAMA VOR/DME	38.1	200.5°	110.65
IWT	KUGA TACAN	43.8	245.2°	114.30
OYE	KIBI VOR/DME	49	71°	111
XZE	IZUMO VOR/DME	58.9	358.4°	113.40
KRE	KOCHI VOR/DME	65.7	139.6°	113.70

Departure and arrival routes

Transition altitude	14000ft
Transition level	14000ft

SID end points	distance	outbound direction
RW10		
KIJYY2, TOJYO3	125.8	65°
MOMOT3	147.6	79°
BINGO4	12.9	96°
KINOE5	16.2	197°
MARCO1	43.9	245°
SINFO2	69.6	349°
OPERA3	64.5	349°
RW28		
KIJYY2, TOJYO3	125.8	65°
MOMOT3	147.6	79°
BINGO4	12.9	96°
KINOE5	16.2	197°

MARCO1	43.9	245°
OPERA3	64.5	349°
SINFO2	69.6	349°

STAR starting points	distance	inbound direction
RW10		
AXELA, DEMIO, MISEN	25.8	239°
RW28		
VISTA	25.8	239°

Disclaimer

The information on this website is not for real aviation. Use this data with the X-Plane flight simulator only! Data taken with kind consent from X-Plane source code and data files. Content is subject to change without notice.

To be used with X-Plane simulation only