

RJOS - Tokushima

Airport details

State	Tokushima Prefecture
Country	Japan
Region	RJ
Elevation	37ft (11m)
Timezone	GMT +9
Coordinates	34.13317, 134.59586
Type	land
ICAO code	RJOS
IATA code	TKS
FAA code	n/a

Runway info

Runway 11 / 29	
length	2496m (8189ft)
bearing	101° / 281°
width	45m (148ft)
surface	asphalt
blast zone	67m (220ft) / 60m (197ft)

Communication

Tokushima TWR	126.200
Tokushima TWR	118.000
Tokushima TWR	126.200
Tokushima TWR	118.000
Tokushima TWR	126.200
Tokushima TWR	118.000
Tokushima TWR	126.200
Tokushima TWR	118.000
Tokushima APP	124.000
Tokushima APP	120.100
Tokushima APP	122.450
Tokushima APP	124.000
Tokushima APP	120.100
Tokushima APP	122.450
Tokushima APP	124.000
Tokushima APP	120.100
Tokushima APP	122.450
Tokushima APP	124.000
Tokushima APP	120.100
Tokushima APP	122.450
Tokushima DEP	124.000

Tokushima DEP	120.100
Tokushima DEP	124.000
Tokushima DEP	120.100
Tokushima DEP	124.000
Tokushima DEP	120.100
Tokushima DEP	120.100
Tokushima DEP	124.000

Approach frequencies

ILS-cat-I	29	108.9	18.00mi
3° GS	29	108.9	18.00mi

Nearby beacons

code	identifier	dist	bearing	frequency
TS	TOKUSHIMA NDB	0.5	116.5°	332
TSC	TOKUSHIMA VORTAC	0.6	105.1°	114.90
KJT	KOMATSUSHIMA TACAN	7.8	167°	113.55
AJD	DME	10	40.4°	115.60
STD	DME	27.8	319.6°	114.40
GBD	DME	28.7	113.6°	116.90
KTE	KAGAWA (TAKAMATSU) VOR/DME	28.8	277.8°	108.40
TZT	TAKAMATSU TACAN	33.9	286.7°	117.50
KIE	KANSAI VOR/DME	35	64.4°	111.60
OKT	OKAYAMA TACAN	43.2	312.8°	115.90
KCE	KOBE VOR/DME	43.3	51.7°	111.25
NKE	NANKI VOR/DME	47.4	121.7°	109.05
OYE	KIBI VOR/DME	52.8	309°	111
ITE	ITAMI VOR/DME	56.8	50.2°	114.75
YOE	YAO VOR/DME	56.8	65°	114.60
KRE	KOCHI VOR/DME	57.8	237.1°	113.70

Departure and arrival routes

Transition altitude	14000ft
Transition level	14000ft

SID end points	distance	outbound direction
RW11		
YME8	85.2	22°
HONMA1	111.9	103°
MISAK1	72.5	120°
TOSAR4	37.9	180°
RW29		
YME8	85.2	22°
HONMA1	111.9	103°

MISAK1	72.5	120°
TOSAR4	37.9	180°

STAR starting points	distance	inbound direction
ALL		
TOSAR	37.9	360°

Disclaimer

The information on this website is not for real aviation. Use this data with the X-Plane flight simulator only! Data taken with kind consent from X-Plane source code and data files. Content is subject to change without notice.

To be used with X-Plane simulation only