

SE58 - Buenavista - Banasur

Airport details

State	El Oro
Country	Ecuador
Region	
Elevation	28ft (9m)
Timezone	GMT -5
Coordinates	-3.34002, -79.86805
Type	land
ICAO code	SE58
IATA code	n/a
FAA code	n/a

Runway info

Runway 10 / 28	
length	962m (3156ft)
bearing	102° / 282°
width	12m (39ft)
surface	asphalt

Communication

No airport communication available for SE58

Nearby beacons

code	identifier	dist	bearing	frequency
MHV	MACHALA VOR/DME	5.3	300.6°	112.10
SRV	SANTA ROSA VOR/DME	10.6	232.8°	116.60
BES	TUMBES VOR/DME	33.5	248.5°	112.90
LOJ	LOJA (LA TOMA) NDB	49.5	142.5°	414
CUN	CUENCA NDB	64.6	62°	410
CUV	CUENCA VOR/DME	64.6	62°	114.50

Disclaimer

The information on this website is not for real aviation. Use this data with the X-Plane flight simulator only! Data taken with kind consent from X-Plane source code and data files. Content is subject to change without notice.

To be used with X-Plane simulation only