

SELT - Latacunga - Latacunga - Cotopaxi

Airport details

State	Cotopaxi
Country	Ecuador
Region	SE
Elevation	9205ft (2806m)
Timezone	GMT -5
Coordinates	-0.90667, -78.61584
Type	land
ICAO code	SELT
IATA code	LTX
FAA code	n/a

Runway info

Runway 01 / 19	
length	3663m (12018ft)
bearing	4° / 184°
width	45m (148ft)
surface	asphalt
displacement threshold	0m (0ft) / 439m (1440ft)

Communication

Latacunga - Cotopaxi Latacunga Ground	121.900
Latacunga - Cotopaxi Latacunga Ground	121.900
Latacunga - Cotopaxi Latacunga Ground	121.900
Latacunga - Cotopaxi Latacunga Ground	121.900
Latacunga - Cotopaxi Latacunga Tower	118.500
Latacunga - Cotopaxi Latacunga Tower	118.500
Latacunga - Cotopaxi Latacunga Tower	118.500
Latacunga - Cotopaxi Latacunga Tower	118.500

Approach frequencies

ILS-cat-I	19	108.7	18.00mi
3.2° GS	19	108.7	18.00mi

Nearby beacons

code	identifrier	dist	bearing	frequency
LTV	LATACUNGA VOR/DME	1.1	183.9°	117.10
AMB	AMBATO NDB	18.5	172.7°	360
AMV	AMBATO VOR/DME	23.1	169.6°	112.70
QSV	SUR (QUITO) VOR/DME	39.8	24.2°	116.80
RIO	RIOBAMBA NDB	45	183°	212
PTZ	PASTAZA (SHELL) NDB	48.6	137.4°	340
PAV	PASTAZA (SHELL) VOR/DME	50.2	136.7°	113.10
QIT	CONDORCOCHA (QUITO) VOR/DME	52.5	6.8°	115.30
STD	SANTO DOMINGO NDB	53.1	318°	270
QNV	NORTE VOR/DME	57.5	15.4°	117.40
OLM	OLMEDO NDB	72	25.8°	400

Departure and arrival routes

Transition altitude 15000ft

SID end points	distance	outbound direction
RW19		
QIT2B	52.5	7°

Disclaimer

The information on this website is not for real aviation. Use this data with the X-Plane flight simulator only! Data taken with kind consent from X-Plane source code and data files. Content is subject to change without notice.

To be used with X-Plane simulation only