

# SERO - Santa Rosa

---

## Airport details

State	El Oro
Country	Ecuador
Region	SE
Elevation	167ft (51m)
Timezone	GMT -5
Coordinates	-3.43611, -79.98389
Type	land
ICAO code	SERO
IATA code	ETR
FAA code	n/a

## Runway info

Runway 07 / 25	
length	2473m (8114ft)
bearing	68° / 248°
width	45m (148ft)
surface	asphalt
Runway 09 / 27	
length	913m (2995ft)
bearing	91° / 271°
width	18m (59ft)
surface	asphalt

## Communication

Santa Rosa Santa Rosa Tower	128.550
Santa Rosa Santa Rosa Tower	128.550
Santa Rosa Santa Rosa Tower	128.550
Santa Rosa Santa Rosa Tower	128.550

## Approach frequencies

ILS-cat-I	07	111.1	18.00mi
3° GS	07	111.1	18.00mi

## Nearby beacons

code	identifier	dist	bearing	frequency
SRV	SANTA ROSA VOR/DME	1.6	246.5°	116.60
MHV	MACHALA VOR/DME	8.8	15.7°	112.10
BES	TUMBES VOR/DME	25.1	255°	112.90

LOJ      LOJA (LA TOMA) NDB      49.9      132.1°      414

## Departure and arrival routes

Transition altitude      3000ft  
Transition level      3000ft

<b>SID end points</b>	<b>distance</b>	<b>outbound direction</b>
RW07		
ANDEL2	19.2	2°
RW25		
ANDE2A	19.2	2°

## Disclaimer

The information on this website is not for real aviation. Use this data with the X-Plane flight simulator only! Data taken with kind consent from X-Plane source code and data files. Content is subject to change without notice.

## To be used with X-Plane simulation only