

SJZV - Itu - Terras De Sao Jose

Airport details

State	São Paulo
Country	Brazil
Region	
Elevation	621ft (189m)
Timezone	GMT -3
Coordinates	-23.29833, -47.29500
Type	helipad
ICAO code	SJZV
IATA code	n/a
FAA code	n/a

Communication

No airport communication available for SJZV

Nearby beacons

code	identifier	dist	bearing	frequency
SCB	SOROCABA (SAO PAULO TMA) VOR/DME	13.3	201.7°	115.20
CPN	CAMPINAS VOR/DME	19.6	29.8°	112
IK	BENTO (CAMPINAS) NDB	21	14.9°	370
STN	SANTANA (SAO PAULO TMA) VOR/DME	23.4	116.9°	114.30
CGO	CONGONHAS (SAO PAULO) VOR/DME	40.4	117.2°	116.90
IG	TUCA (SAO PAULO) NDB	40.9	102.7°	410
EMB	EMBUGUACU (SAO PAULO) NDB	42.3	139°	525
BGC	BRAGANCA (BRAGANCA PAULIS VOR/DME	45.1	64.4°	116.20
DAD	DIADEMA (SAO PAULO) NDB	45.3	120.4°	200
BCO	BONSUCESSO (SAO PAULO) VOR/DME	50.5	96.7°	116
RCL	RIO CLARO NDB	54.1	342.8°	280
RDE	REDE (SAO PAULO) VOR/DME	55.2	127.6°	116.70

Disclaimer

The information on this website is not for real aviation. Use this data with the X-Plane flight simulator only! Data taken with kind consent from X-Plane source code and data files. Content is subject to change without notice.

To be used with X-Plane simulation only