

# SVSO - Santo Domingo - Mayor Buenaventura Vivas Intl

---

## Airport details

State	Tachira State
Country	Venezuela
Region	SV
Elevation	1083ft (330m)
Timezone	GMT -4
Coordinates	7.57119, -72.04469
Type	land
ICAO code	SVSO
IATA code	STD
FAA code	n/a

## Runway info

Runway 12 / 30	
length	3023m (9918ft)
bearing	110° / 290°
width	45m (148ft)
surface	asphalt

## Communication

Mayor Buenaventura Vivas Intl GND 121.900  
Mayor Buenaventura Vivas Intl GND 121.900  
Mayor Buenaventura Vivas Intl GND 121.900  
Mayor Buenaventura Vivas Intl GND 121.900  
Mayor Buenaventura Vivas Intl VIVAS 123.300  
TWR  
Mayor Buenaventura Vivas Intl VIVAS 123.300  
TWR  
Mayor Buenaventura Vivas Intl VIVAS 123.300  
TWR  
Mayor Buenaventura Vivas Intl VIVAS 123.300  
TWR

## Nearby beacons

code	identifier	dist	bearing	frequency
STD	SANTO DOMINGO TACAN	1.5	92.5°	115.30
PVA	PUERTO VIVAS VOR/DME	13.7	108°	114.20
CUC	CUCUTA VOR/DME	35.4	307.6°	113.30
CTN	EL CANTON VOR/DME	35.7	95.2°	116

UC	CUCUTA NDB	36.5	308.2°	264
CU	CUCUTA NDB	42.1	311°	395
LFA	LA FRIA VOR/DME	42.4	341.4°	113

## Departure and arrival routes

Transition altitude 13000ft

<b>SID end points</b>	<b>distance</b>	<b>outbound direction</b>
RW12		
BISUS1	35.7	95°

## Disclaimer

The information on this website is not for real aviation. Use this data with the X-Plane flight simulator only! Data taken with kind consent from X-Plane source code and data files. Content is subject to change without notice.

## To be used with X-Plane simulation only