

YBTL - Townsville - Townsville Intl

Airport details

State	Queensland
Country	Australia
Region	YB
Elevation	18ft (5m)
Timezone	GMT +10
Coordinates	-19.25250, 146.76527
Type	land
ICAO code	YBTL
IATA code	TSV
FAA code	n/a

Runway info

Runway 07 / 25	
length	1104m (3622ft)
bearing	75° / 255°
width	30m (98ft)
surface	asphalt
Runway 01 / 19	
length	2449m (8035ft)
bearing	25° / 205°
width	45m (148ft)
surface	asphalt

Communication

Townsville Intl ATIS	114.100
Townsville Intl AWIS	133.500
Townsville Intl ATIS	114.100
Townsville Intl AWIS	133.500
Townsville Intl ATIS	114.100
Townsville Intl AWIS	133.500
Townsville Intl ATIS	114.100
Townsville Intl AWIS	133.500
Townsville Intl TOWNSVILLE Traffic	118.300
Townsville Intl TOWNSVILLE Traffic	118.300
Townsville Intl TOWNSVILLE Traffic	118.300
Townsville Intl TOWNSVILLE Traffic	118.300
Townsville Intl TOWNSVILLE Delivery	128.100
Townsville Intl TOWNSVILLE Delivery	128.100
Townsville Intl TOWNSVILLE Delivery	128.100
Townsville Intl TOWNSVILLE Delivery	128.100
Townsville Intl TOWNSVILLE Ground	121.800

Townsville Intl TOWNSVILLE Ground	121.800
Townsville Intl TOWNSVILLE Ground	121.800
Townsville Intl TOWNSVILLE Ground	121.800
Townsville Intl TOWNSVILLE Tower	118.300
Townsville Intl TOWNSVILLE Tower	118.300
Townsville Intl TOWNSVILLE Tower	118.300
Townsville Intl TOWNSVILLE Tower	118.300
Townsville Intl TOWNSVILLE	126.800
Departure	
Townsville Intl TOWNSVILLE	126.800
Departure	
Townsville Intl TOWNSVILLE	126.800
Departure	
Townsville Intl TOWNSVILLE	126.800
Departure	

Approach frequencies

ILS-cat-I	01	109.3	18.00mi
3° GS	01	109.3	18.00mi

Nearby beacons

code	identifier	dist	bearing	frequency
TVL	TOWNSVILLE NDB	0.3	331.8°	276
TL	TOWNSVILLE VOR/DME	0.6	319.1°	114.10
TVL	TOWNSVILLE TACAN	2	220.6°	113.50

Departure and arrival routes

Transition altitude	10000ft
Transition level	11000ft

SID end points	distance	outbound direction
RW01		
SWIFT1	54.0	2°
WALTA1, MAGGY2	53.6	118°
JEMMA2	41.7	143°
ANRUB1	44.3	185°
CATEY1	42.2	253°
CARMN1	36.6	308°
PEWEE6	80.6	349°
RW19		
SWIFT1	54.0	2°
WALTA1	53.6	118°
RURTO1	16.8	122°
KVALM1, JEMMA2	41.7	143°
ANRUB1	44.3	185°

CATEY1	42.2	253°
PEWEE6	80.6	349°

STAR starting points	distance	inbound direction
RW01		
IBUX1A	36.7	156°
SPAR1A	78.0	156°
PORO1A, PORO1P	35.0	309°
VOMP1A, VOMP1P	34.2	346°
RW19		
IBUX1Z	36.7	156°
PORO1Z, PORO1P, PORO1B	35.0	309°
VOMP1B, VOMP1P, VOMP1Z	34.2	346°

Disclaimer

The information on this website is not for real aviation. Use this data with the X-Plane flight simulator only! Data taken with kind consent from X-Plane source code and data files. Content is subject to change without notice.

To be used with X-Plane simulation only