

YBTL - Townsville - Townsville Intl

Airport details

| | |
|-------------|----------------------|
| State | Queensland |
| Country | Australia |
| Region | YB |
| Elevation | 18ft (5m) |
| Timezone | GMT +10 |
| Coordinates | -19.25250, 146.76527 |
| Type | land |
| ICAO code | YBTL |
| IATA code | TSV |
| FAA code | n/a |

Runway info

| | |
|----------------|----------------|
| Runway 07 / 25 | |
| length | 1104m (3622ft) |
| bearing | 75° / 255° |
| width | 30m (98ft) |
| surface | asphalt |
| Runway 01 / 19 | |
| length | 2449m (8035ft) |
| bearing | 25° / 205° |
| width | 45m (148ft) |
| surface | asphalt |

Communication

| | |
|-------------------------------------|---------|
| Townsville Intl ATIS | 114.100 |
| Townsville Intl AWIS | 133.500 |
| Townsville Intl ATIS | 114.100 |
| Townsville Intl AWIS | 133.500 |
| Townsville Intl ATIS | 114.100 |
| Townsville Intl AWIS | 133.500 |
| Townsville Intl ATIS | 114.100 |
| Townsville Intl AWIS | 133.500 |
| Townsville Intl TOWNSVILLE Traffic | 118.300 |
| Townsville Intl TOWNSVILLE Traffic | 118.300 |
| Townsville Intl TOWNSVILLE Traffic | 118.300 |
| Townsville Intl TOWNSVILLE Traffic | 118.300 |
| Townsville Intl TOWNSVILLE Delivery | 128.100 |
| Townsville Intl TOWNSVILLE Delivery | 128.100 |
| Townsville Intl TOWNSVILLE Delivery | 128.100 |
| Townsville Intl TOWNSVILLE Delivery | 128.100 |
| Townsville Intl TOWNSVILLE Ground | 121.800 |

| | |
|---|---------|
| Townsville Intl TOWNSVILLE Ground | 121.800 |
| Townsville Intl TOWNSVILLE Ground | 121.800 |
| Townsville Intl TOWNSVILLE Ground | 121.800 |
| Townsville Intl TOWNSVILLE Tower | 118.300 |
| Townsville Intl TOWNSVILLE Tower | 118.300 |
| Townsville Intl TOWNSVILLE Tower | 118.300 |
| Townsville Intl TOWNSVILLE Tower | 118.300 |
| Townsville Intl TOWNSVILLE Departure | 126.800 |
| Townsville Intl TOWNSVILLE Departure | 126.800 |
| Townsville Intl TOWNSVILLE Departure | 126.800 |
| Townsville Intl TOWNSVILLE Departure | 126.800 |

Approach frequencies

| | | | |
|-----------|----|-------|---------|
| ILS-cat-I | 01 | 109.3 | 18.00mi |
| 3° GS | 01 | 109.3 | 18.00mi |

Nearby beacons

| code | identifier | dist | bearing | frequency |
|------|--------------------|------|---------|-----------|
| TVL | TOWNSVILLE NDB | 0.3 | 331.8° | 276 |
| TL | TOWNSVILLE VOR/DME | 0.6 | 319.1° | 114.10 |
| TVL | TOWNSVILLE TACAN | 2 | 220.6° | 113.50 |

Departure and arrival routes

| | |
|---------------------|---------|
| Transition altitude | 10000ft |
| Transition level | 11000ft |

| SID end points | distance | outbound direction |
|----------------|----------|--------------------|
| RW01 | | |
| SWIFT1 | 54.0 | 2° |
| WALTA1, MAGGY2 | 53.6 | 118° |
| JEMMA2 | 41.7 | 143° |
| ANRUB1 | 44.3 | 185° |
| CATEY1 | 42.2 | 253° |
| CARMN1 | 36.6 | 308° |
| PEWEE6 | 80.6 | 349° |
| RW19 | | |
| SWIFT1 | 54.0 | 2° |
| WALTA1 | 53.6 | 118° |
| RURTO1 | 16.8 | 122° |
| KVALM1, JEMMA2 | 41.7 | 143° |
| ANRUB1 | 44.3 | 185° |

| | | |
|--------|------|------|
| CATEY1 | 42.2 | 253° |
| PEWEE6 | 80.6 | 349° |

| STAR starting points | distance | inbound direction |
|-----------------------------|-----------------|--------------------------|
| RW01 | | |
| IBUX1A | 36.7 | 156° |
| SPAR1A | 78.0 | 156° |
| PORO1A, PORO1P | 35.0 | 309° |
| VOMP1A, VOMP1P | 34.2 | 346° |
| RW19 | | |
| IBUX1Z | 36.7 | 156° |
| PORO1Z, PORO1P, PORO1B | 35.0 | 309° |
| VOMP1B, VOMP1P, VOMP1Z | 34.2 | 346° |

Disclaimer

The information on this website is not for real aviation. Use this data with the X-Plane flight simulator only! Data taken with kind consent from X-Plane source code and data files. Content is subject to change without notice.

To be used with X-Plane simulation only