

# ZSNT - Nantong - Nantong Xingdong Intl'

---

## Airport details

State	Jiangsu
Country	China
Region	ZS
Elevation	16ft (5m)
Timezone	GMT +8
Coordinates	32.06833, 120.98167
Type	land
ICAO code	ZSNT
IATA code	NTG
FAA code	n/a

## Runway info

Runway 18 / 36	
length	3403m (11165ft)
bearing	178° / 358°
width	45m (148ft)
surface	concrete
blast zone	60m (197ft) / 60m (197ft)

## Communication

Nantong Xingdong Intl' ATIS	126.875
Nantong Xingdong Intl' ATIS	126.875
Nantong Xingdong Intl' ATIS	126.875
Nantong Xingdong Intl' ATIS	126.875
Nantong Xingdong Intl' Nantong Tower	118.200
Nantong Xingdong Intl' Nantong Tower	118.200
Nantong Xingdong Intl' Nantong Tower	118.200
Nantong Xingdong Intl' Nantong Tower	118.200

## Approach frequencies

ILS-cat-I	36	109.1	18.00mi
ILS-cat-I	18	110.5	18.00mi
3° GS	36	109.1	18.00mi
3° GS	18	110.5	18.00mi

## Nearby beacons

code	identifier	dist	bearing	frequency
W	XINGDONG (NANTONG) NDB	1.1	182.5°	425
NTG	NANTONG VOR/DME	1.8	355.5°	115.60
SUF	SHUOFANG VOR/DME	44.2	223.9°	114.10
VMB	WUXI VOR/DME	44.7	247.6°	113.90
PK	NANXIANG NDB	50.3	156°	208
CGT	CHONGGU VOR/DME	52.6	166.1°	112.50
SHA	HONGQIAO VOR/DME	53.9	157.3°	117.20
JTN	JIUTING VOR/DME	59.6	159.1°	109.60
HSH	HENGSHA VOR/DME	60.9	128.9°	114.40
PDL	LIUZAO VOR/DME	66.4	143.6°	109.40
PUD	PUDONG VOR/DME	67.6	138.2°	116.90

## Departure and arrival routes

Transition altitude	9843ft
Transition level	11811ft

SID end points	distance	outbound direction
RW18		
POM12D, POM62X	37.7	168°
UNT62X, UNT12D	36.3	281°
RW36		
POM11D, POM61X	37.7	168°
UNT11D, UNT61X	36.3	281°

STAR starting points	distance	inbound direction
RW18		
UNT02A, UNT52F, UNT54F	36.3	101°
POM02A, POM52F	37.7	348°
RW36		
UNT51F, UNT01A	36.3	101°
POM51F, POM01A	37.7	348°

## Holding patterns

STAR name	hold at	type	turn	heading*	altitude	leg	speed limit
POM52F	NT307	VHF	right	184 (4)°		1.0min timed	205
UNT51F	NT307	VHF	right	184 (4)°		1.0min timed	205
UNT54F	NT307	VHF	right	184 (4)°		1.0min timed	205

\*) magnetic outbound (inbound) holding course

# Disclaimer

The information on this website is not for real aviation. Use this data with the X-Plane flight simulator only! Data taken with kind consent from X-Plane source code and data files. Content is subject to change without notice.

## To be used with X-Plane simulation only